




HOW TO DISINFECT/DEEP CLEAN EXO-01

EXO-01 Overhead exoskeleton

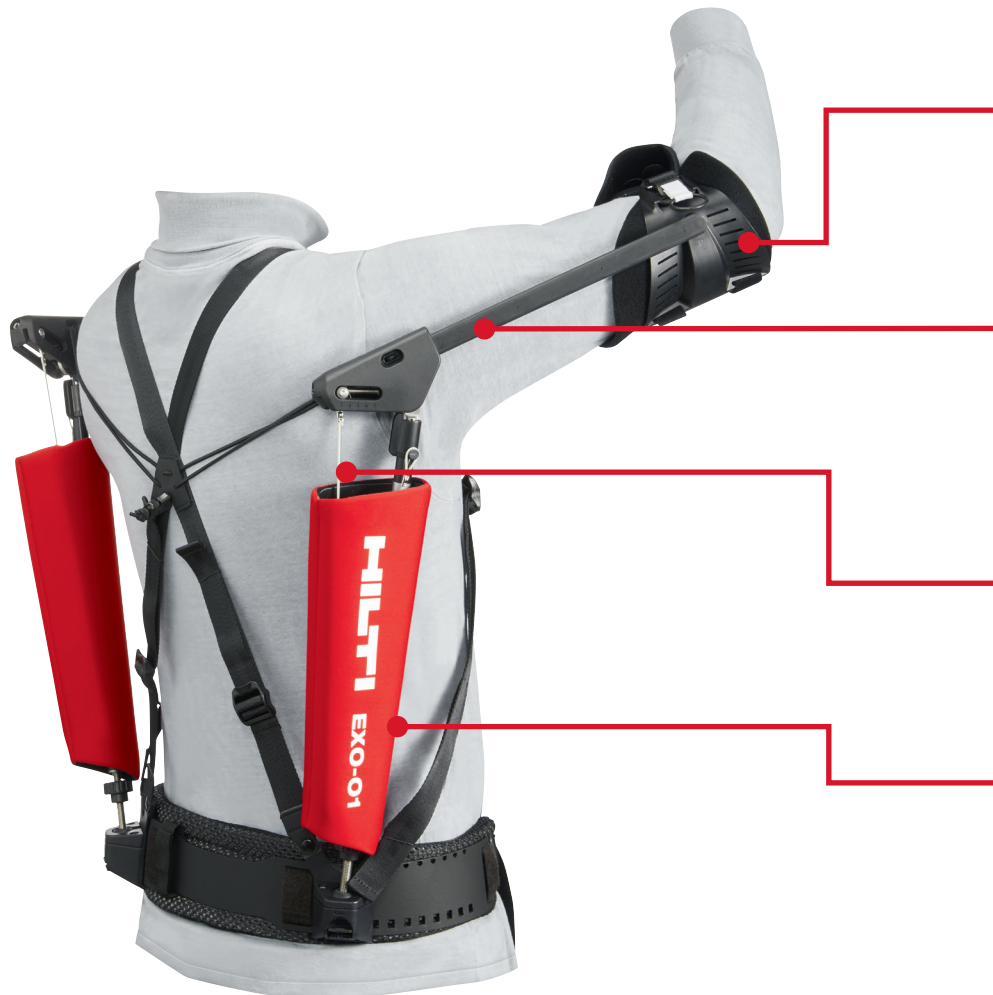

Always remove padding (arm pads, hip belt) before cleaning to facilitate proper disinfection- padding parts can be either disinfected or hand washed.



All metal, polymeric and textile parts (e.g. straps) can be thoroughly cleaned with either disinfection wipes or disinfection spray or applying disinfectant to a lint-free cloth.



The internal expander unit shall not be in direct contact with disinfectant to avoid deterioration - the textile cover and visible expander part can be wiped.



Let disinfectant dry completely (minimum 30 seconds) before use.